




Insert battery / SD card

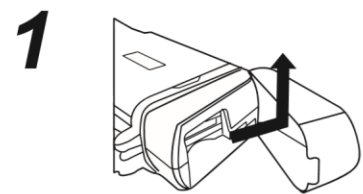

1 Check if the power is off and slide the battery cover in the direction of the arrow.

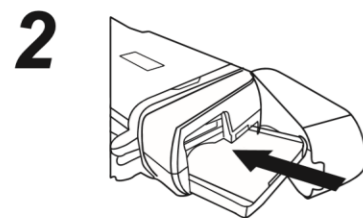


2 Insert the battery pack. Insert the battery in the direction of the arrow.

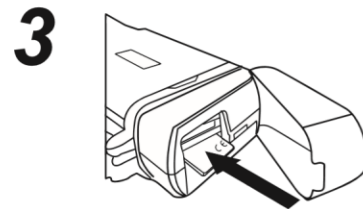

3 Insert the SD card. Insert the SD card in the direction of the arrow.

4 Close the battery cover / SD card cap.

Turning the power On / Off

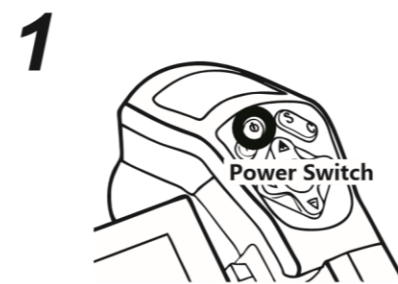


1 Press and hold the power switch for 3 seconds. The power indicator lights green.

2 Turn off the camera. Hold the power switch for 3 seconds, the power indicator goes off.


Note: the power indicator will keep lighting when camera is powered on.

Using the LCD monitor

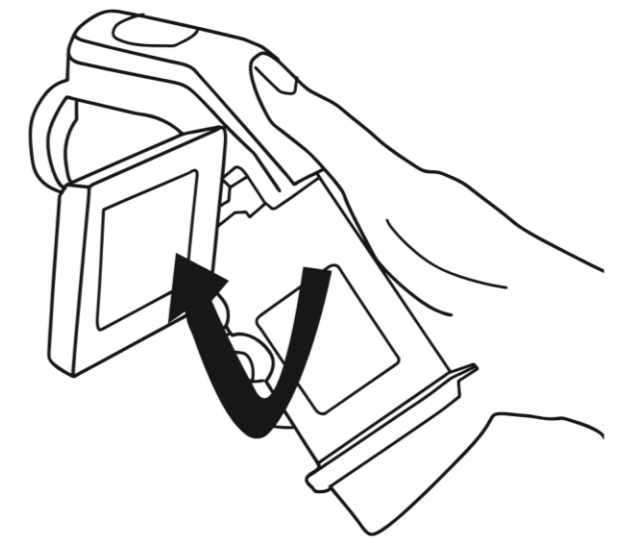


Open the LCD display in the direction of the arrow.

Manually Focus

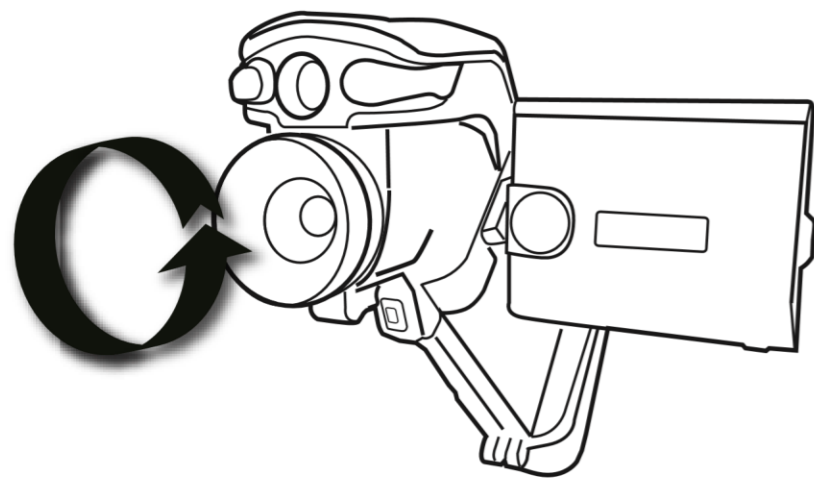

Aim the IR camera at the subject, turn the focus ring to focus on the target.

Resetting the settings to Default

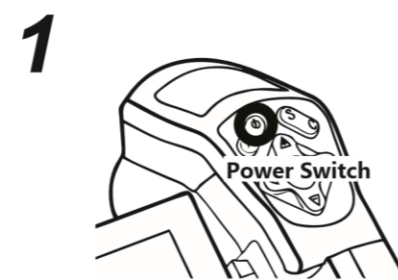


1 Turn off the IR camera.




2 Press and hold the power switch and C key for seconds.

Charge the battery

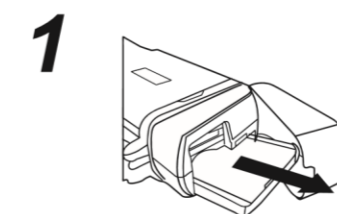

1 Take out the battery.

2 Attach the power cord to the battery charger.

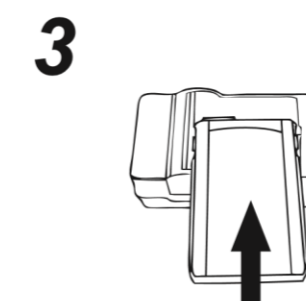

3 Align the edge of the battery then insert it.